


COUPLER 4" (1 lb.)

One 4" coupler, six 1" screws

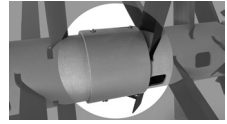

(used to connect two Weed Line Laydowns)

1. Assemble the first Weed Line Laydown using the trunk with the coupler attached to it (see page XX).
2. Secure second trunk to coupler with three 1" screws. Be sure the trunks are both positioned upright where slits appear as "V" shapes.
3. Insert remaining limbs.

