


DOCK CABLE KIT (1 lb.)

One 5' cable, two 3/16" quick links, one 24" chain, one stainless steel 5" bolt & nut

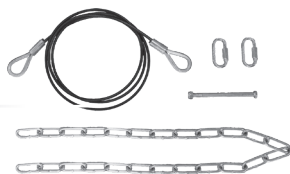

1. Wrap the **chain** around any part of the dock frame that is structurally sound. Secure with **quick link**.

Do NOT wrap the cable around the dock structure - it can cause damage to the cable and/or your dock over time. Cable kits will add at least 5 feet of depth to your vertical product. Depending on placement, the attached chain can also add additional depth. If you want to adjust the depth, do so *only by adjusting the chain* - **not wrapping the cable**. Depth can also vary if the product is hung from a support that is close to or far from the water.

IMPORTANT NOTE:

Attach product to the dock
BEFORE placing it in the water.

*Note the depth and direction of
boat lift when placing your habitat.*

